

 $\begin{tabular}{ll} \textbf{Specification:}\\ \textbf{Product Size: } 170 \times 79 \times 51 \text{ mm}\\ \textbf{Weight: } 497g\\ \textbf{Loudspeaker: } 40\text{mm } 4\Omega\\ \textbf{Rated Power: } 3W \times 2\\ \textbf{Interface: Micro USB}\\ \end{tabular}$

Wireless Parameter:

Operation Frequency: 2.400GHz - 2.480GHz Power Output (Peak): Class 2/4 dbm Receiving Sensitivity: -91db, @ 0.1% BER Operation Range: Around 10m

Battery Parameter: Capacity: 2000mA, 3.7V, Polymer Li-ion Battery Music Playback time: 5 Hours at 70% volume Charging Standard: DC 5V, 1000mA(Max.) Charging time: 3.5-4 hours

Accessory: USB charging cable x 1pcs

- Operation Instructions
 1 Power switch: on/off;
 2 Audio In
 3 Micro USB: Charging port;
- | William | Wil

- Previous Sorig.
 Next Song
 LED Indicator: Built-in battery indicator
 Red light on In charging;
 light off Fully charged;
 Blue light flashing quickly wireless paring;

- * Blue light on wireless paring successfully. * Blue light flashing slowly play music.

- Play via Computer / Mobile phone:

 Turn On the power of speaker

 Activate wireless in computer

 Search the speaker, name "CM5205"

 Pairing

 Connect and Play

ApplicationBe applicable to all wireless devices.

- Troubleshooting

 1. The phone call could be interfered with high frequency electromagnetism. Avoid use this product under high frequency environment.

 2. Wireless is a bidirectional transmitting protocol; transmitting distance is highly related to the audio player.

 3. When the speaker cannot be connected, please delete the rest wireless devices name on the list of user's computer / mobile phone. Then, follow the steps in operation instructions

 4. The sound performance could also be affected under poor signal environment, or product is low battery capacity. Please move the product to environment with strong signal or charging the product.

Pre-caution

Be careful to turn in larger volume, avoid affecting hearing.